

Welcome

Creative DiVi Cam 316 is a high-quality yet affordable digital video camera that allows you to create, edit, share and send photos to your friends and family.



Creative DiVi Cam 316 is not just a digital camera. You can use it to make short video or audio recordings, or play MP3s. You can also use it as a webcam when you connect it to a computer.

This easy-to-follow manual shows you how to use your new Creative DiVi Cam 316 and install all the software included on the Installation CD. You'll find clear instructions on how to take pictures, record videos and voices, play MP3s, and use your Creative DiVi Cam 316 as a webcam. An overview of how to use bundled software to transfer photos and videos from the Creative DiVi Cam 316 to your computer is also provided.


Whenever you want to send snapshots or short video clips via e-mail, create exciting photo albums, produce videos, chat with your friends or family face to face over the Internet, or listen to MP3s, Creative DiVi Cam 316 is just the tool you need.

Contents

1. IMPORTANT INFORMATION	6
<i>Before Using Your Camera</i>	6
<i>Operational Precautions.....</i>	6
<i>Package Contents</i>	8
2. GETTING TO KNOW YOUR CAMERA	9
CREATIVE DiVi CAM 316 CONTROLS	9
<i>Top View</i>	9
<i>Front View</i>	9
<i>Back View</i>	10
<i>Right Side View.....</i>	11
<i>Bottom View</i>	11
<i>Battery power level indicators</i>	11
3. GETTING STARTED.....	12
<i>Preparing Your Camera</i>	12
4. USING YOUR CAMERA	13

<i>Turning on your camera</i>	13
FUNCTION TREE.....	13
<i>Video Mode</i>	13
<i>Camera Mode</i>	14
<i>MP3 player</i>	14
<i>Setup Mode</i>	15
<i>Voice Mode.....</i>	15
VIDEO MODE[]	16
<i>Status identifier</i>	16
<i>Recording video</i>	17
<i>Recording a video with the self-timer</i>	18
<i>Special effects.....</i>	19
<i>Playing back videos.....</i>	19
<i>Viewing video thumbnails.....</i>	20
<i>Managing videos</i>	20
CAMERA MODE 	22
<i>Status identifier</i>	22
<i>Activating the AE lock</i>	22
<i>Configuring your camera.....</i>	22
<i>Enabling the auto-flash</i>	23

<i>Adjusting the Exposure Value (EV)</i>	23
<i>Taking a photo</i>	23
<i>Taking a photo with the self-timer</i>	23
<i>Special effects.....</i>	24
<i>Taking close-up pictures</i>	24
<i>Viewing photos</i>	24
<i>Trimming a photo.....</i>	25
<i>Viewing photo thumbnails</i>	25
<i>Managing photos.....</i>	26
<i>DPOF.....</i>	26
<i>Printing photos directly to a PictBridge compatible printer</i>	29
PLAYING MP3s.....	31
<i>Status identifier</i>	31
<i>Playing an MP3 file.....</i>	31
<i>Adjusting volume, bass or treble levels.....</i>	32
<i>Navigating in a track.....</i>	34
<i>Play modes</i>	34
<i>Managing MP3s.....</i>	35

VOICE MODE 	37
<i>Making a voice recording</i>	37
<i>Status Identifier</i>	37
<i>Playing a recording</i>	37
<i>Navigating in a track</i>	37
<i>Play modes</i>	37
<i>Managing voice recordings</i>	38
SETUP MODE	40
<i>Setting options</i>	40
<i>About the Help screen</i>	42
 5. CONNECTING YOUR CAMERA	 44
<i>Configure your camera as a webcam or a mass storage device</i>	44
<i>Connecting Your Camera to a TV/VCR</i>	45
<i>System Requirements</i>	46
 6. INSTALLING DRIVERS	 47
 7. INSTALLING SOFTWARE	 49
<i>Installing New Soft Video Works</i>	49

<i>8. CAMERA SPECIFICATIONS.....</i>	<i>52</i>
<i>9. FREQUENTLY ASKED QUESTIONS.....</i>	<i>53</i>

1. Important Information

Please read through this manual carefully before using Creative DiVi Cam 316. Follow all precautions to avoid damage or harm caused by improper operation.

Safety Precautions

- Do not attempt to play the Installation CD in a CD player.
- Creative DiVi Cam 316 is a precision electronic device. Do not attempt to service Creative DiVi Cam 316 yourself. Opening or removing covers may expose you to dangerous voltage or other hazards.
- Do not leave Creative DiVi Cam 316 under direct sunlight for extended periods of time.
- Avoid contact with liquid from the Liquid Crystal Display (LCD).
 - If liquid gets on your skin, wipe off the liquid with a clean cloth, and wash the affected area with water.
 - If liquid gets into your eye, flush your eye with lots of fresh water immediately. Consult a doctor for follow-up treatment.
 - If liquid is swallowed, rinse your mouth out with water. Drink a few cups of water to dilute the toxin and seek treatment immediately.

Before Using Your Camera

- Test out your camera before using it for important events.
- Observe copyright law
Unless agreed by the proper owner, all images or videos taken with this camera cannot be used in violation of copyright law. Observe "No Photography" or "No Recordings" restrictions where appropriate. Transfer of images, recordings or MP3s to or from your camera's memory card must be conducted under the constraints of copyright law.


Operational Precautions

This product consists of intricate electronic parts. To conserve the life of your product, do not drop or subject Creative DiVi Cam 316 to impact when taking pictures.

- Avoid using or storing Creative DiVi Cam 316 in:
 - damp and dusty places
 - sealed vehicles or places subject to extremely high temperatures or direct heat
 - violently turbulent environments
 - areas full of smoke, oil fumes or steam
 - areas subject to a strong magnetic field

- rainy or snowy environments
- Do not open the battery cover when the power is on.
- If water has entered your camera, turn the power off immediately, and remove the batteries.
- Maintain your digital video camera:
 - Use a lens brush or soft cloth to wipe the surface clean
 - Do not use any solid object to hit your camera.
 - Avoid scratching the lens or LCD surface.
 - Do not use any detergent or volatile solutions to clean your camera. Use a slightly damp, soft cloth only.

Package Contents

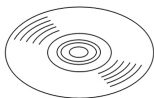

Installation CD
(Drivers and Application
Software)



Pouch



Wrist Strap & Lens Cover Strap



Earphone



 
USB Cable




TV OUT Cable



Audio Cable

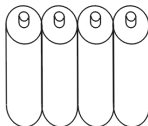

4 AAA Alkaline Batteries

 

User's Guide

- Installation CD (Drivers & Application Software)
- Pouch
- Wrist Strap& Lens Cover Strap
- Earphone
- USB Cable
- TV OUT Cable
- Audio Cable
- 4 AAA Alkaline Batteries
- User's Guide

2. Getting to Know Your Camera

Creative DiVi Cam 316 Controls

 
Top View

1. Microphone
2. Speaker



Front View

1. Lens
2. LED
3. Flash

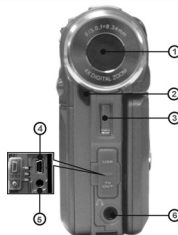

Terminal Compartment

Creative DiVi Cam 316 has three jacks/ports for attaching cables: Headphone jack, TV Out and USB. These jacks/ports enable you to attach the appropriate cables from Creative DiVi Cam 316 to your computer, TV/VCR or earphones.

4. **USB Port** — Use this to connect your camera to your computer via the USB cable. You can then transfer images, recorded audio and video, or MP3s between the camera and your computer. You can also use your camera as a webcam.
5. **TV Out Port** — Use this to connect your camera to a TV for viewing images or videos stored in your camera.
6. **Headphone jack** — Use this to connect your headphones or earphones for playing back MP3s and voice recordings stored in your digital video camera.

Back View

1. **Multi-select button** — This button comprises four buttons, **Up**, **Down**, **Left** and **Right**. In Camera and Video modes, use the **Up** or **Down** buttons to adjust the exposure level. Use the **Left** button to set the self-timer.

In Camera mode, press the **Right** button to set the flash mode.

In Video mode, press the **Right** button to pause and resume video recording.

2. **Shutter/Record button** — Press this button to take pictures in Camera mode, to start & stop recording videos in Video mode or to start & stop recording audio in Voice mode.

3. **LED** — When you turn your camera on, the LED lights up in green. When the camera is busy, the LED lights up in red.

4. **Menu button** — Press the MENU button in all modes to access the function menu for each mode. The menus are shown on the LCD.

5. **Scroller** — Use this control to scroll-select menu options. To scroll-select an option, move the scroller upwards or downwards to browse through options, and then select the option by pressing the scroller.


In MP3 mode, move the scroller to adjust the volume.

In Camera and Video modes, move the scroller to zoom in and out.


In Playback mode, move the scroller to go to the next or previous image, video or recording.

6. **Playback button** — Press this button to view your images, videos, recordings and MP3s.

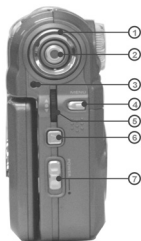


7. **Power switch** — To turn your camera on or off, slide the switch downwards for one second, then release it.




Right Side View

1. **Macro Switch** — Slide this switch to select Normal or Macro mode. The Macro icon  appears on the LCD when you select Macro mode.

2. **Mode dial** — Select a mode by rotating the dial and aligning these icons with the mode marker:

-  — Video mode
-  — Camera mode
- **MP3** — MP3 mode
-  — Recording mode
- **SET** — Setup mode

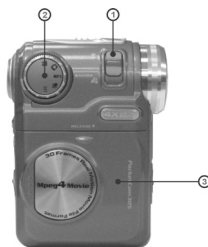

3. Battery Cover

Bottom View





1. Liquid Crystal Display (LCD)

2. **Display/Help button** — In Video and Camera modes, press this button to switch between the normal preview screen, with or without icon display and the help screen.

In other modes, switch between the normal preview screen and the help screen.

3. Memory Card slot cover

Battery power level indicators


-  Full power
-  Medium power
-  Low power
-  Replace battery



3. Getting Started

Preparing Your Camera

1. Insert four AAA batteries into the battery compartment .
2. Insert the SD memory card according to the icon shown on the camera when the card slot cover is open.
To take out the memory card, push the card to pop it out.

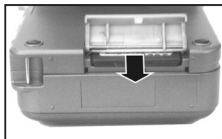

Note: Your camera's 16MB internal memory is disabled when you insert an SD memory card. **Do not** remove the card while your camera is turned on.



4. Using Your Camera


Turning on your camera

Slide the Power switch down to turn on the camera. The LED lights up in green and the LCD turns on automatically.


Note: The LCD turns off automatically if you do not use your camera for over one minute. The camera turns off if you do not use your camera for the time set for the Auto Power Off setting.

Function Tree


Video Mode

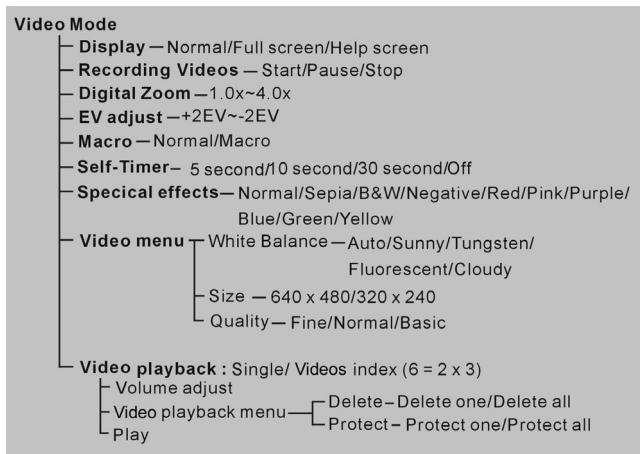

Camera Mode

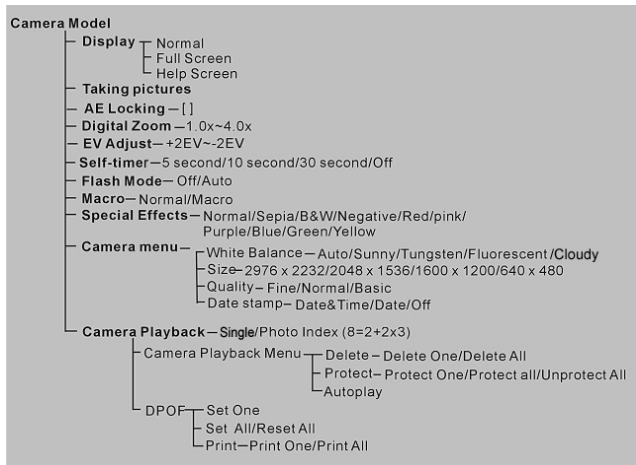 


MP3 player

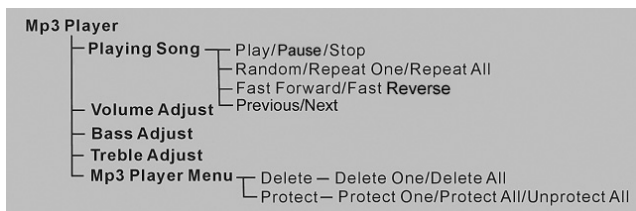 


Setup Mode



 
Voice Mode

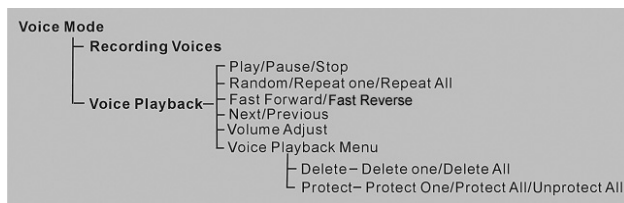

Video mode[

Rotate mode dial to [

 Status identifier

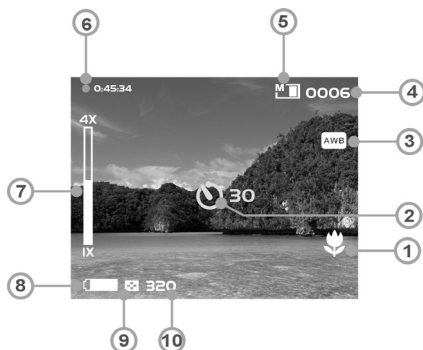


- 1 Macro
- 2 Self-Timer/Delay
- 3 White Balance
- 4 Video Counter
- 5 Memory Status
- 6 Remaining Available Recording Time
- 7 Zoom Level
- 8 Battery Level
- 9 Quality Level
- 10 Size

Recording video

Your camera can record video in MPEG4 format.

 In Video mode, press the menu button. The **Video Menu** appears.

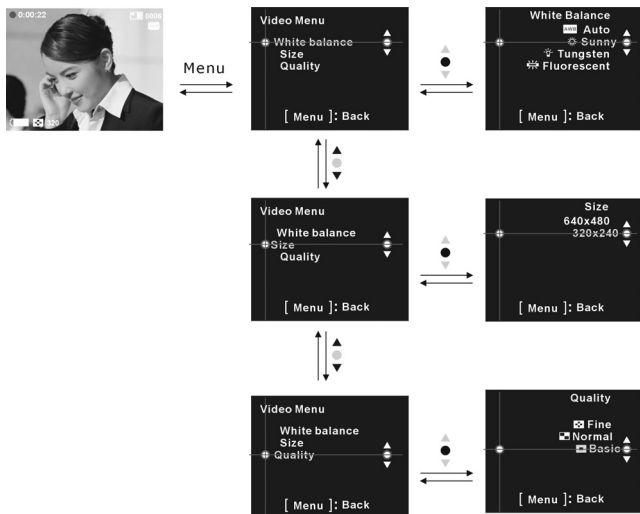

To select video size

1. Scroll-select **Size**.
2. Scroll-select the default resolution for video capture: **640X480** or **320X240**.

To select white balance


1. Scroll-select **White balance**.
2. Scroll-select a white balance setting: **Auto**, **Sunny**, **Tungsten**, **Fluorescent** or **Cloudy**.

To select video quality

1. Scroll-select **Quality**.
2. Scroll-select the default video quality: **Fine**, **Normal** or **Basic**

To start recording


1. Press the Shutter/Record button to start recording video. While recording, move the scroller up or down to zoom in or out. You can also use the Multi-select button to adjust the exposure level.

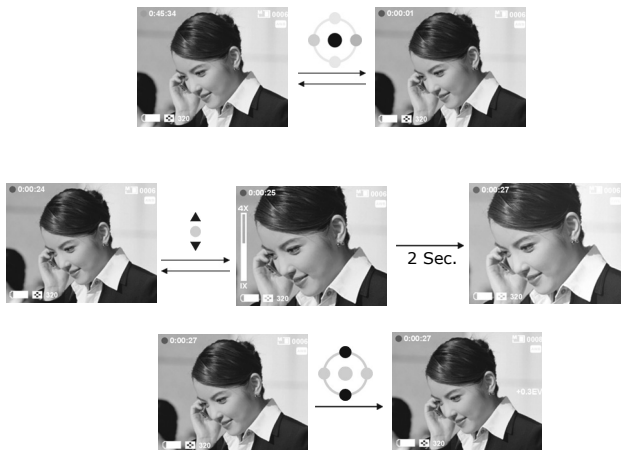

2. To pause recording, press the Right button. Press the button again to continue recording.
3. To stop recording, press the Shutter/Record button.


Recording a video with the self-timer

1. Press the Left button activate the self-timer.
2. Scroll-select a self-timer interval.
3. Press the Shutter/Record button to start the self-timer. Recording starts when the counter reaches zero. To stop the timer, press the scroller.

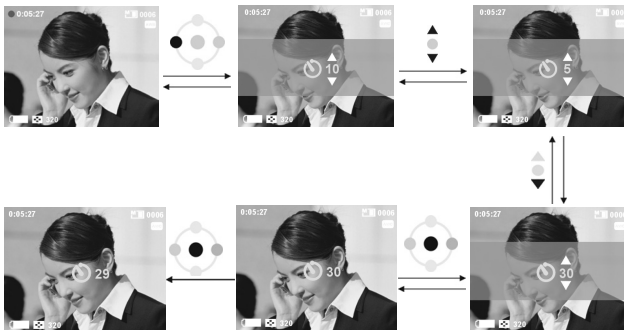

Special effects

In Video mode, press the scroller to see the special effects menu. Scroll-select an effect that you want to use.

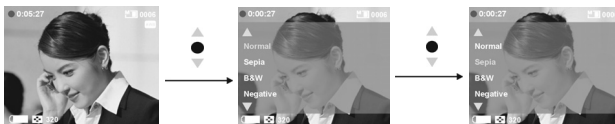


Playing back videos


1. In Video mode, press the Playback button.
2. Scroll-select a video. Video playback starts.
To adjust the volume, press the Up or Down buttons.

To delete all videos

 1. Scroll-select **Delete All**.
2. Scroll-select **OK** to confirm the operation.
Otherwise, scroll-select **Cancel**.
Protected videos cannot be deleted.

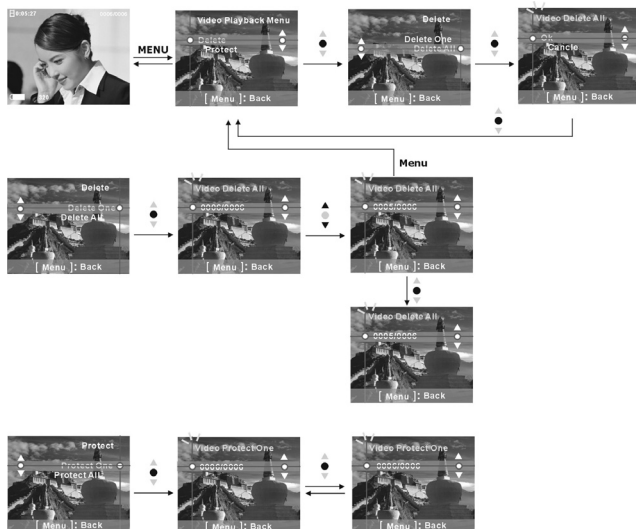


To protect a video

 1. In video playback mode, scroll-select **Protect**.
2. Scroll-select **Protect One**.
3. Scroll-select the video to protect.
This icon  appears. Press the scroller again to unprotect the video.

To protect all videos


1. In video playback mode, scroll-select **Protect**.
2. Scroll-select **Protect All**.
3. Scroll-select **OK** to confirm the operation.
Otherwise, scroll-select **Cancel**.

Camera mode

Rotate mode dial to 

Status identifier

- ① Time
- ② Macro
- ③ AE-Lock
- ④ White Balance
- ⑤ Photo Counter
- ⑥ Memory Status
- ⑦ Flash
- ⑧ Zoom Level
- ⑨ Battery Level
- ⑩ Quality
- ⑪ Size
- ⑫ Date

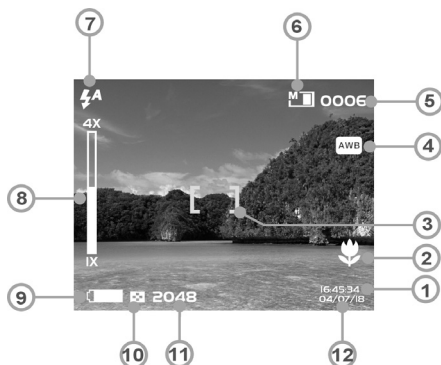

Activating the AE lock

Press the Shutter/Record button half way. A pair of brackets appear on the LCD.

Configuring your camera

You can set default photo capture options before taking photos with your camera. In Camera mode, press the Menu button.

To select the default image size

1. Scroll-select **Size**.
2. Scroll-select the default image resolution: **2976X2232**, **2048X1536**, **1600X1200** or **640X480**.

To select white balance

1. Scroll-select **White balance**.
2. Scroll-select a white balance setting: **Auto**, **Sunny**, **Tungsten**, **Fluorescent** or **Cloudy**.

To select image quality

1. Scroll-select **Quality**.
2. Scroll-select the default image quality: **Fine**, **Normal** or **Basic**

To configure date and time display

1. Scroll-select **Date stamp**.
2. Scroll-select a display option: **Date & Time**, **Date** or **Off**.

Enabling the auto-flash

The flash is available only in Camera mode. Press the Right button to enable or disable the auto-flash.

Adjusting the Exposure Value (EV)

In Camera mode, press the Up or Down button to adjust the exposure value. Choose an EV value from -2.0 to +2.0.

Taking a photo

1. Use the LCD to compose your picture.
2. Press the Shutter/Record button halfway, to lock the exposure level.
3. Press the Shutter/Record button all the way down.
Hold the camera still while the photo is taken.


Taking a photo with the self-timer

1. Press the Left button activate the self-timer.
2. Scroll-select a self-timer interval.
3. Press the Shutter/Record button to start the self-timer. The camera takes a photo when the counter reaches zero.
To stop the timer, press the scroller.




Special effects

In Camera mode, press the scroller to see the special effects menu. Scroll-select an effect that you want: Normal, Sepia, B&W, Negative, Red, Pink, Purple, Blue, Green or Yellow.

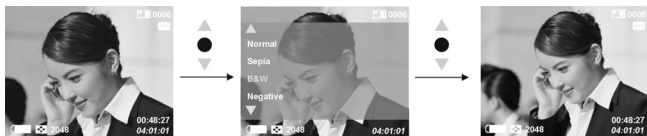

Taking close-up pictures

 
1. Move the Macro switch upwards to select Macro mode.
The Macro icon  appears on the LCD.
2. Take pictures as described in "Taking a photo".

Viewing photos

1. In Camera mode, press the Playback button.
2. Use the scroller to go to the previous or next photo.
3. To zoom into a photo, press the scroller. Move the scroller up or down to zoom in and out of a photo.
When zoomed in, use the Up, Down, Left or Right buttons to see the other parts of the photo.

Trimming a photo

1. In Camera mode, press the Playback button.
2. Use the scroller to go to the previous or next photo.
3. Move the scroller up to zoom into the photo. Use the Up, Down, Left or Right buttons to frame your new photo.
4. Press the shutter button. A list of image resolutions appears.
5. Scroll-select a resolution. This has to be smaller than that of the original photo.
Your newly trimmed photo overwrites the original photo.

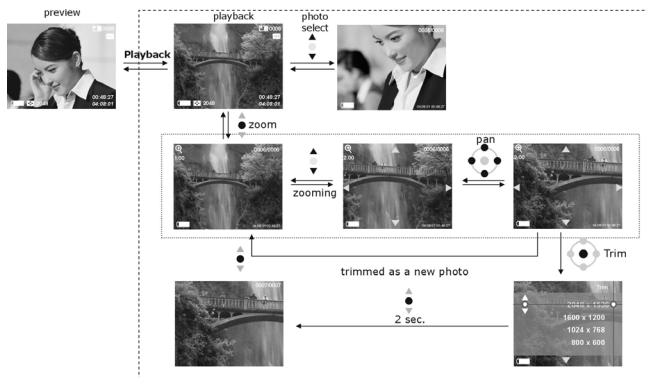

Viewing photo thumbnails

1. In camera playback mode, press the Left button.
The LCD shows eight images at a time.
Press the button again to go back to full screen view.
2. Use the scroller to see more photos.



Managing photos

In camera playback mode, press the Menu button.

To delete a photo

 
1. Scroll-select **Delete**.
2. Scroll-select **Delete One**.
3. Scroll-select the photo to delete.
Protected photos cannot be deleted.

To delete all photos

1. Scroll-select **Delete**.
2. Scroll-select **Delete All**.
3. Scroll-select **OK** to confirm the operation.
Otherwise, scroll-select **Cancel**.
Protected photos cannot be deleted.

To protect a photo

1. In camera playback mode, scroll-select **Protect**.
2. Scroll-select **Protect One**.
3. Scroll-select the photo to protect.

This icon  appears. Press the scroller again to unprotect the photo.

To protect all photos

1. In camera playback mode, scroll-select **Protect**.
2. Scroll-select **Protect All**.
3. Scroll-select **OK** to confirm the operation.
Otherwise, scroll-select **Cancel**.

Autoplay (slideshow)

1. In camera playback mode, press the Menu button.
2. Scroll-select **Autoplay**.
A slideshow of all photos stored in your camera or the memory card starts up.

DPOF

 
If you are using a Digital Print Order Format (DPOF) compatible printer, you can assign the number of copies to print for one, or all photos. Select the **Set one** option to mark one photo at a time, or **Set all** to print one copy for all photos.

Set one

1. In camera playback mode, press the Menu button.
2. Scroll-select **DPOF**.
3. Scroll-select **Set one**.
4. Scroll-select the photo to assign copies to.
Scroll-select the photo again to increase the number of copies, to a maximum of three.
5. Press the Menu button to save your selection.

Set all

1. In camera playback mode, press the Menu button.
2. Scroll-select **DPOF**.
3. Scroll-select **Set all**.
Scroll-select **OK** to assign each photo a print value of one.
Otherwise, scroll-select **Cancel** to reset each value to zero.

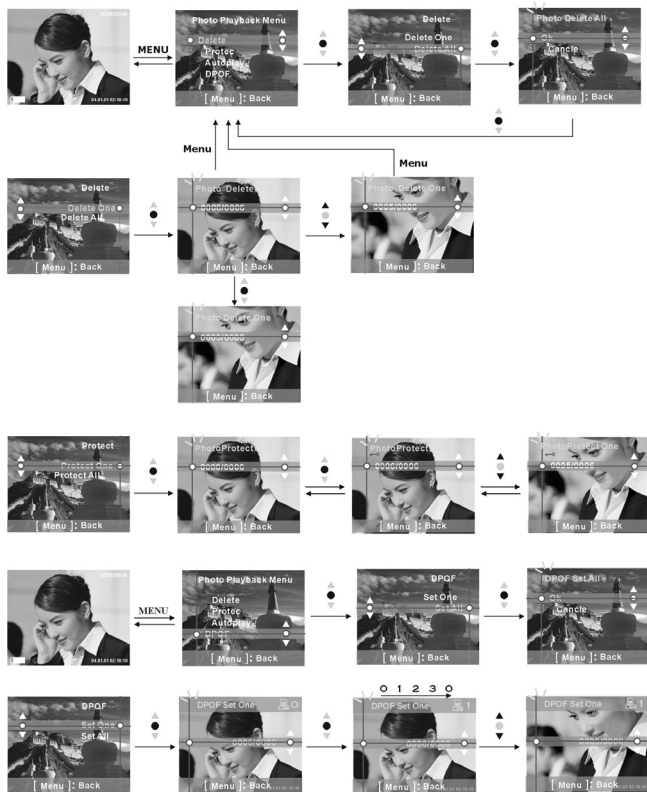

Printing photos directly to a PictBridge compatible printer

1. In camera playback mode, press the Menu button.
2. Scroll-select **Print**.
You are prompted to connect your photo printer.
3. When you have properly connected your printer, you can choose to print individual photos (**Print one**), or all photos (**Print all**).

Printing options


Scroll-select one of these options:

- **photo to print** — Press the Left or Right buttons to select a photo to print (for **Print one** only).
- **copys to print** — Press the Left or Right buttons to set the number of copies to print.
- **paper size** — Press the Left or Right buttons to select the paper size for printing.
- **date stamp** — Press the Left or Right buttons to enable or disable date printing.
- **Print** — Press the scroller to start printing.

Playing MP3s


Rotate the mode dial to **MP3**.

Status identifier

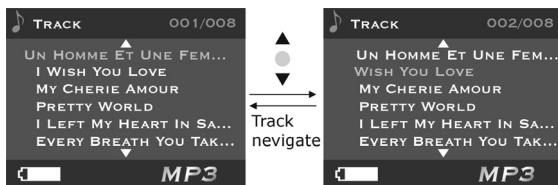


Playing an MP3 file

1. In MP3 mode, press the Menu button.
2. Scroll-select the MP3 file you want to play.
3. Press the Shutter/Record button to start playback.
4. Press the Menu button to pause or resume playback.

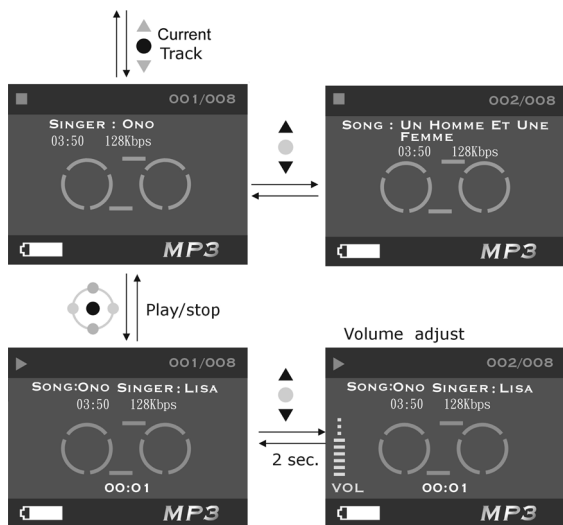


Adjusting volume, bass or treble levels

When playing MP3s, press the scroller to switch between volume, bass or treble, and press the Up or Down button to adjust the level.

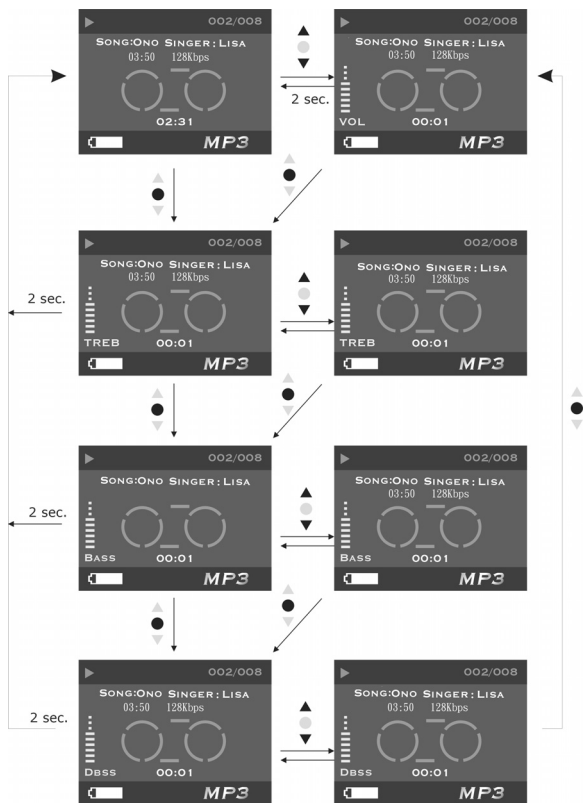

Navigating in a track


When playing MP3s, press the Up or Down buttons to skip to the previous or next track. Press the Left or Right buttons to skip backward or forward in a track.

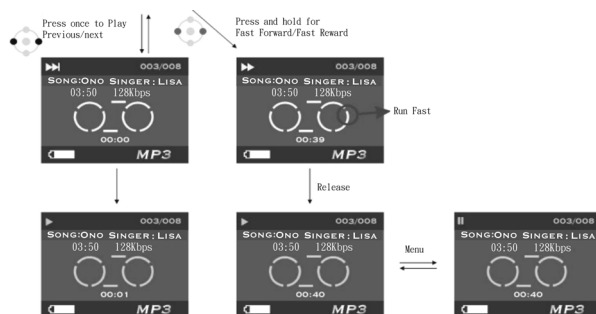

Play modes


When playing MP3s, press the Playback button to cycle through available play modes:

- repeat one — repeat playback of current track
- repeat all — repeat playback of all tracks
- random — play all tracks in random order
- normal — play all tracks in sequence.

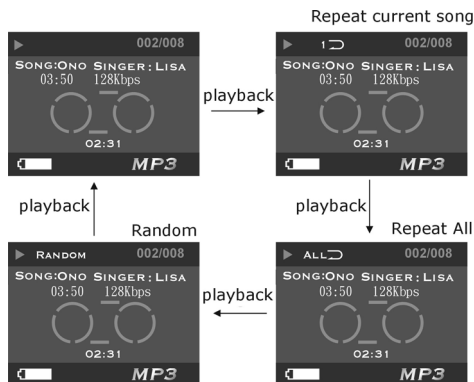

Managing MP3s

 In MP3 mode, while you are not playing any MP3s, press the Menu button to see the menu options.

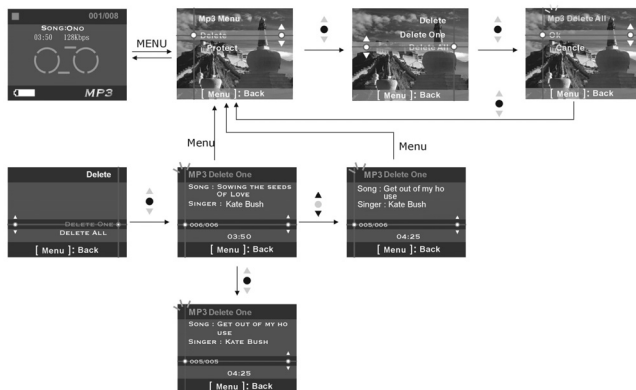


To delete a track

1. In MP3 mode, scroll-select **Delete**.
2. Scroll-select **Delete One**.
3. Scroll-select the track to delete.
Protected tracks cannot be deleted.

To delete all MP3s

1. In MP3 mode, scroll-select **Delete**.
2. Scroll-select **Delete All**.
3. Scroll-select **OK** to confirm the operation.
Otherwise, scroll-select **Cancel**.
Protected tracks cannot be deleted.

 
To protect a track

1. In MP3 mode, scroll-select **Protect**.
2. Scroll-select **Protect One**.
3. Scroll-select the track to protect.
4. This icon  appears. Press the scroller again to unprotect the track.

To protect all tracks

1. In camera playback mode, scroll-select **Protect**.
2. Scroll-select **Protect All**.
3. Scroll-select **OK** to confirm the operation.
Otherwise, scroll-select **Cancel** to unprotect all tracks.


Voice mode

Rotate the mode dial to 

Making a voice recording

In Voice mode, press the Shutter/Record button to start recording. Press the button again to stop the recording.

Status Identifier

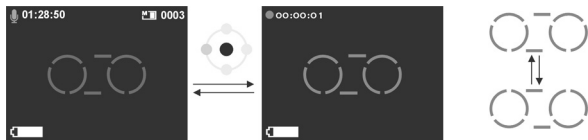

Playing a recording

1. In Voice mode, press the Menu button.
2. Scroll-select the recording you want to play.
3. Press the scroller to start playback.
Press the Up or Down buttons to adjust the volume level.
4. Press the scroller to stop playback.

 
Navigating in a track

When playing recordings, press the Left or Right buttons to skip to the previous or next recording. Press the Up or Down buttons to skip backward or forward in a track.

Play modes


When playing recordings, press the Playback button to cycle through available play modes:

- repeat one — repeat playback of current recording
- repeat all — repeat playback of all recordings
- random — play all recordings in random order
- normal — play all recordings in sequence.

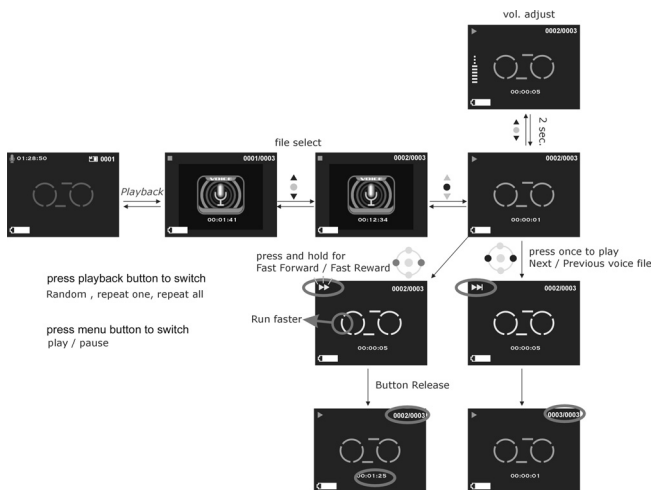

Managing voice recordings

In voice playback mode, press the Menu button to see the menu.

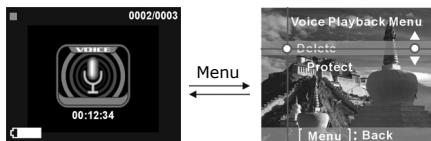

To delete a recording

 
1. Scroll-select **Delete**.
2. Scroll-select **Delete One**.

3. Scroll-select the recording to delete.
Protected recordings cannot be deleted.

To delete all recordings

1. Scroll-select **Delete**.
2. Scroll-select **Delete All**.
3. Scroll-select **OK** to confirm the operation.
Otherwise, scroll-select **Cancel**.
Protected recordings cannot be deleted.

To protect a recording

1. Scroll-select **Protect**.
2. Scroll-select **Protect One**.
3. Scroll-select the recording to protect.
4. This icon  appears. Press the scroller again to unprotect the recording.

To protect all recordings

1. Scroll-select **Protect**.
2. Scroll-select **Protect All**.
3. Scroll-select **OK** to confirm the operation.
Otherwise, scroll-select **Cancel** to unprotect all recordings.

Setup mode

Rotate the mode dial to **SET**.

In Setup mode, you can configure the settings for your camera

 
- Date/Time
- Language
- Format
- Memory
- Default
- Frequency
- Auto power off
- Beep
- TV (output)

 
To set an option

In Setup mode, scroll-select an option:


- **Date/Time** — year/month/day/hour/minute/second
- **Language** — English/Italian/French/Deutsch/Spanish/Japanese/Simplified Chinese/Traditional Chinese
- **Format** — Ok/Cancel
- **Memory** (information) — Video file total/Photo file total/MP3 file total/Voice file total/Memory free space
- **Default** — Ok/Cancel
- **Frequency** — 60HZ/50HZ
- **Auto power off** — Off /3 minutes/5 minutes
- **Beep** — On/Off

Setting options

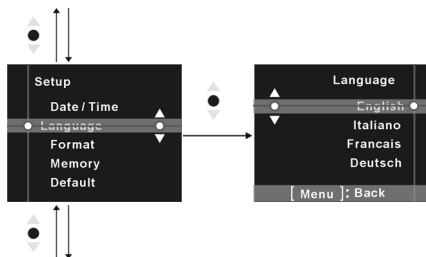


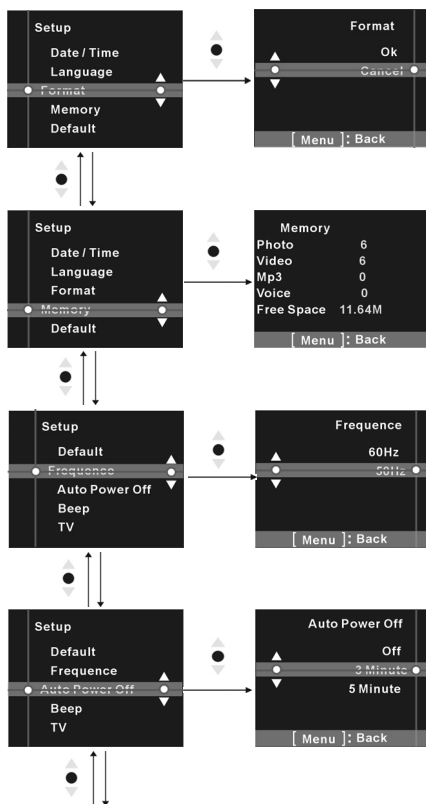


Help screen in MP3 mode

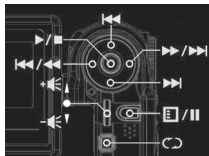 

Help screen in Voice mode

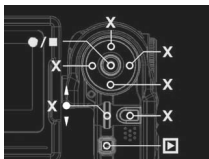 

Help screen in voice playback mode

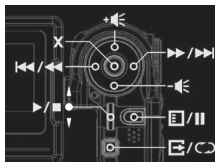 

Help screen in Setup mode



5. Connecting your camera

Configure your camera as a webcam or a mass storage device


1. Insert four AAA batteries into the battery compartment.
2. Connect the smaller end of the USB cable into the USB port of your camera.



3. Connect the other end of the USB cable to your computer's USB port.



4. The camera's LCD Panel turns on and the **PC Connection** Menu is displayed.

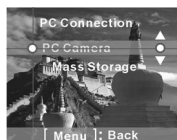

5. Press the Up or Down buttons to select the **Mass Storage Drive** option or the **PC Camera** option.

Connecting Your Camera to a TV/VCR

You can connect your Creative DiVi Cam 316 to a television if you want to have a larger view of your photos.

1. Connect the TV Output cable to the TV Output port and the television.
2. Connect the Audio Output cable to the Audio Output port and the television.




3. On your television, select the channel for auxiliary Audio/Video input.

System Requirements

Minimum System Requirements	
OS	Microsoft® Windows® XP/2000/Me/98 SE
CPU	Intel Pentium 166MHz or higher
Memory	32 MB memory or better
CD-ROM	4X or above
HDD	10 MB free disk space or better
Others	a USB 1.1 port

For Windows ME and 98 SE users only

1. After installing the drivers and applications, connect your camera to your computer.
2. In the PC connection menu, scroll-select **PC Camera**.
3. On your Windows desktop, right-click **My Computer**.
4. Click **Device Manager**.
5. Right-click the **GENERIC IDE DISK TYPE 47** entry and select the **Properties** option. This screen appears:

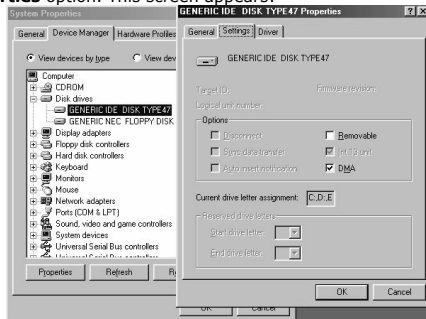

6. Select the **DMA** checkbox.
7. Click the **OK** button.

Note: Before playing video clips (*.AVI files), make sure that you have DirectX 8.0 or higher installed, along with a working audio card.

6. Installing Drivers

Before using your camera as a mass storage device, or as a webcam, you must install the proper drivers.


1. Insert the Installation CD into your CD-ROM drive.
Your CD should start automatically. If it does not, follow the steps below:
 - I. Start Windows Explorer.
 - II. On the left pane, click the **My Computer** icon.
 - III. Right-click the CD-ROM/DVD-ROM drive icon, and then click **AutoPlay**.
2. Choose a language for the installation.
3. In the Software installer screen, click **Driver -> Install**.



4. Select the desired language, then click the **OK** button.



5. Click the **Next** button to continue.

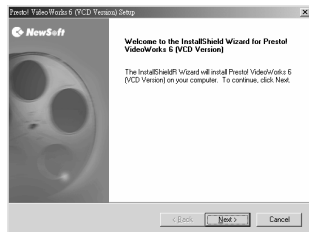

6. Click the **Finish** button.



7. Installing Software

Installing New Soft Video Works


1. Insert the Installation CD into your CD-ROM drive.
Your CD should start automatically. If it does not, follow the steps below:
 - I. Start Windows Explorer.
 - II. On the left pane, click the **My Computer** icon.
 - III. Right-click the CD-ROM/DVD-ROM drive icon, and then click **AutoPlay**.
2. Choose a language for the installation.
3. In the Software installer screen, click **New Soft Video Works -> Install**



4. Select the desired language, and then click the **OK** button.




5. Click the **Yes** button.

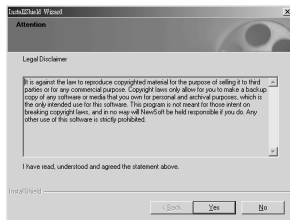


6. Select the language, then click the **Next** button.




7. Click the **Next** button.

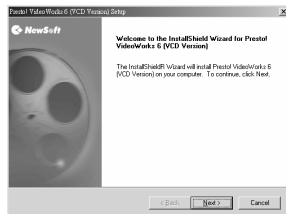

8. Click the **Yes** button.

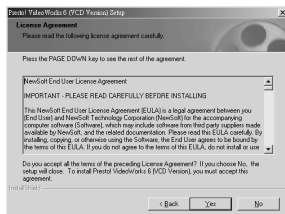


9. Follow the onscreen instructions.
10. Click the **Finish** button.

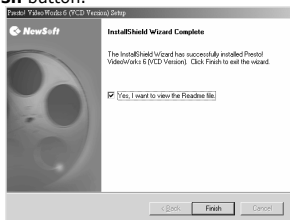

11. When this dialog box appears, click the **OK** button.



12. Click the **OK** button.

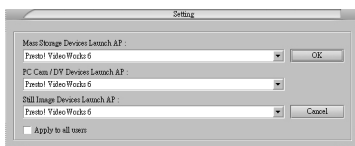

8. Camera Specifications

- Lens : f=8.34mm
- Sensor : 3 megapixel CMOS sensor
- Aperture: F / 3.0
- Sensitivity : ISO 100
- White balance : Auto, Sunny, Tungsten, Fluorescent, Cloudy
- Shutter : programmed electronic shutter
- Shutter speed : 1/4second ~ 1/2000second
- Storage Media : 16MB Internal Flash Memory and SD Card Slot (supports max. 512MB card)
- File Format : : still: JPEG motion: MPEG sound: WAV
- Resolution :
 still: 2976 x 2232 (Firmware Interpolation Technology), 2048 x 1536, 1600 x 1200, 640 x 480
 motion: 640 x 480, 320 x 240
- Digital Zoom : 4x
- Focal distance: Standard: 1.2m ~ Infinity Macro: 17 ~ 22cm
- Self-timer : 5 second · 10 second · 30 second
- PC Camera mode : 30 fps. (320 x 240) 10 fps. (640 x 480)
- Flash mode : Auto/off
- TV-OUT: NTSC / PAL
- PC Interface : USB 1.1
- motion Storage data capability (Built-in 16MB memory):

320x240:

Fine	Normal	Basic
Approx. 400 second	Approx. 400 second	Approx. 400 second

640x480:

Fine	Normal	Basic
Approx. 300 second	Approx. 300 second	Approx. 300 second

- Sound storage data capability (Built-in 16MB memory) : Approx. 21minute
- Still storage data capability (Built-in 16MB memory) :

	640X480	1600X1200	2048X1536	2976X2232
Fine	85	27	17	10
Normal	120	43	28	11
Basic	160	63	38	24

- Power source : 4 AAA 1.5V alkaline batteries
- Dimension: 90x 70 x 37 mm
- Weight : Approx. 136g (without batteries)

9. Frequently Asked Questions

I was using the camera, but the camera controls suddenly don't work.

- Try turning off your camera, then turning it back on.
- You might have removed the memory card while your camera was still turned on. Remove the batteries, wait three seconds, and then put them back.
- Check that the batteries are inserted properly.
- Check for camera damage. If it is damaged, send it for repair.

I have problems using my photo printer with the camera.

- Error messages or prompts can be caused by printer malfunctions, or power supply problems. Check the connections to your camera, and printer. Turn your camera on and reconnect it to the printer.

I can't seem to format my memory card.

- You may have used a memory card that was formatted differently. Use Windows Explorer to format the memory card using the FAT file format. See your Windows online Help for details.

